Monitoring & Control Startkit Hardware

Direct and Chain Connection Schematic

Schematic illustrations only, may differ from actual products M&C enabled LNB or BDC unit Example for Direct connection Included in startkit: Transceiver USB-RS485 0.2 meter Included in startkit: Monitoring & Control M8 Cable communication 2 meter male-to-male Example for RTU / Host Chain connection Accessory to startkit Accessory to startkit Adapter Cable Client 1 M8 splitter / Y-adapter 0.3 meter 2x female 1x male male-to-female Accessory to startkit Cable M8 20 meter, 5 meter male-to-male or 10 m male-to-pigtail Client 2 Client ..n





